


1949-1954 Chevy Car Motor Mount Kit

Install Sheet

1-866-925-1101

www.totalcostinvolved.com

**CHECK ALL PARTS INCLUDED IN THIS KIT TO THE PARTS LIST BEFORE INSTALLATING OF THE KIT.
IF ANY PIECES ARE MISSING, PLEASE CONTACT: TOTAL COST INVOLVED 800-925-1101**

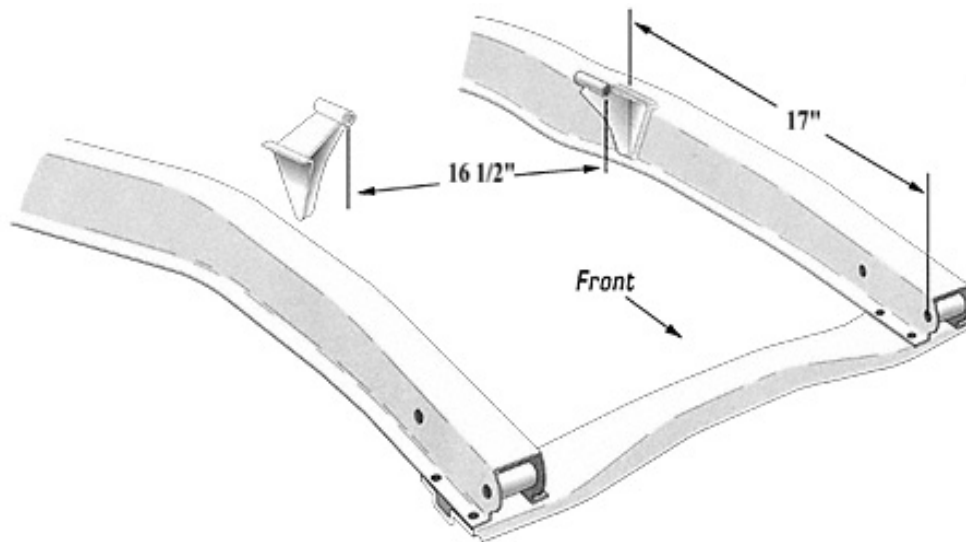

1. Preparing the frame:

- Remove the original engine and transmission.
- Clean the frame of any dirt and rust, especially around the area where the motor mounts need to be welded (see illustration).

2. Installing Motor Mounts

- Mock up the new engine and transmission into the frame.
- Check for clearance and interference (fan to radiator, firewall, exhaust to steering).
- Locate the motor mount location in frame, a reference dimension is given in the illustration, and mark the frame where the motor mounts are positioned.
- The motor mounts are marked left and right. If there is a doubt, the tubes for the 7/16 x 4" bolts should be lower in the rear than on the front.
- Remove engine and transmission.
- Position motor mounts where the frame is marked and tack weld in place.
- Double check measurement for location and squareness.
- Final weld mounts.
- Paint over welded and bare metal area.
- Install engine and transmission.