





POWER BRAKE PEDAL INSTRUCTIONS

1416 West Brooks Street, Ontario, CA 91762
Phone (909) 984-1773 • Fax (909) 391-1526

'55-'59 CHEVROLET TRUCK POWER BRAKE PEDAL ASSEMBLY

Mounting the '55-'59 Chevrolet truck power brake pedal assembly requires some redrilling. Using the template provided on the back of this sheet, and the instructions [see: steps 1 & 2] the pedal assembly should be easily installed. New master cylinder access hole must be cut in the floor with it's center approximately 10" back and 1 $\frac{3}{4}$ " inward from the original hole in the floor.

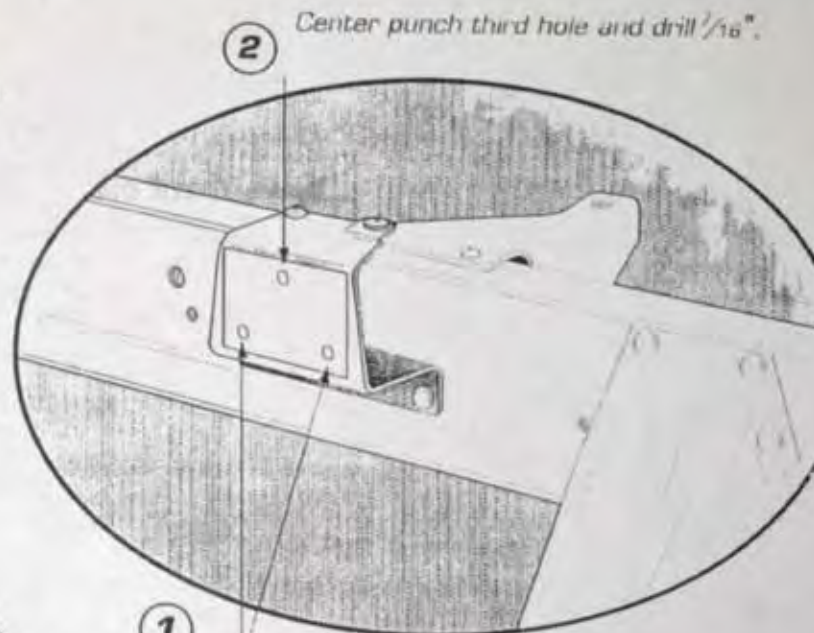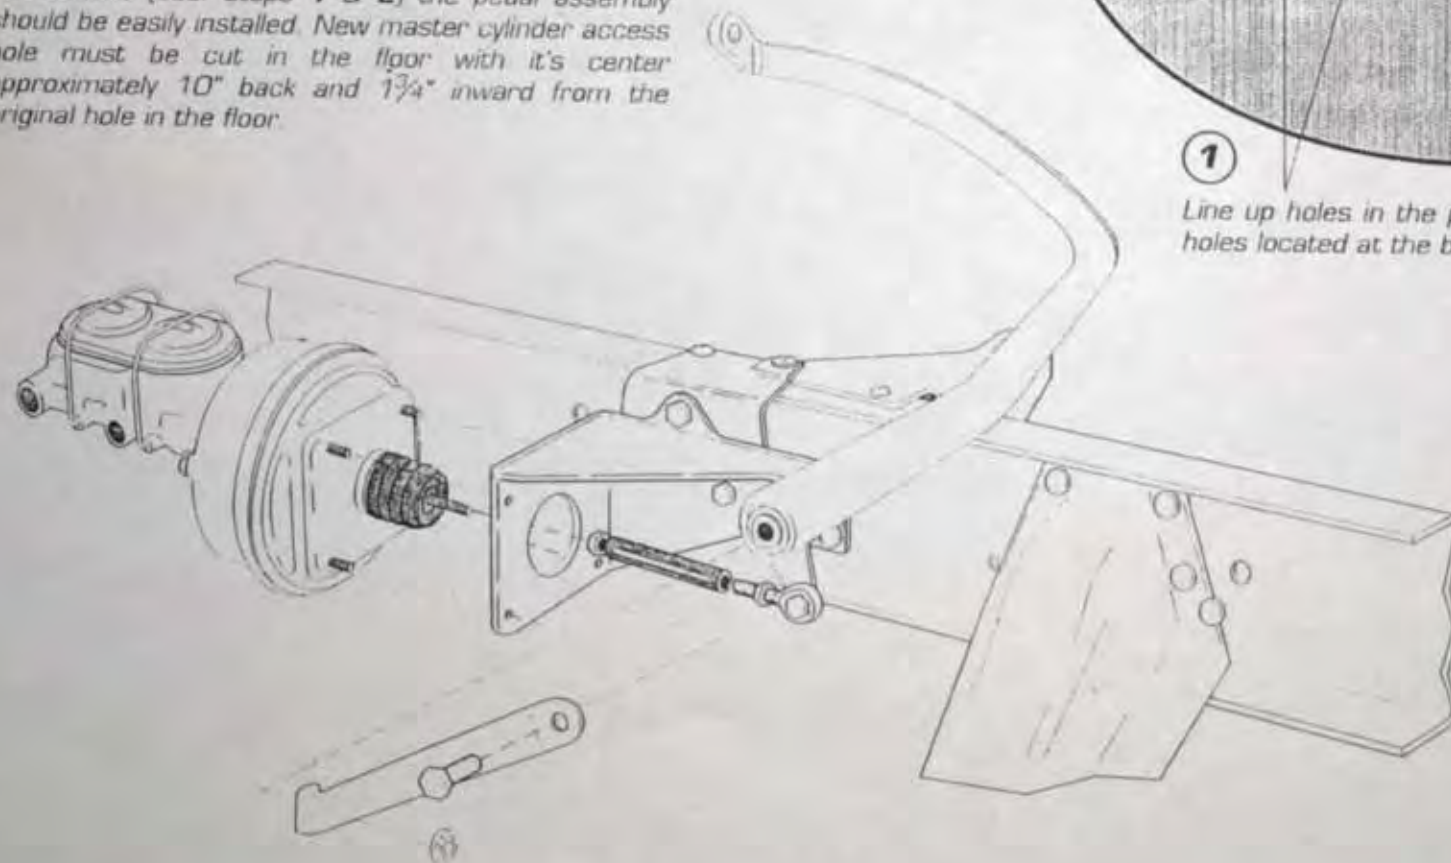

2 Center punch third hole and drill $\frac{1}{16}$ ".

1 Line up holes in the paper template with the two holes located at the bottom of the bracket.



cut out template

Drill $\frac{7}{16}$ "

