

## **#6062FP - Installation Instructions**

### **1960-62 Chevy Truck Firewall Mounting Plate**


#### **Note:**

Read these instructions completely before attempting this conversion.

Make sure this kit fits your application before painting or plating. Beware that chroming or painting the booster can cause it to malfunction if not performed properly. Parts that have been painted, plated or modified may not be returned.

#### **Instructions:**

1. Remove the original master cylinder.
2. Mount the firewall plate to the firewall using the holes marked "A" in the diagram.
3. Drill the four 3/8" holes marked "B" in the diagram using the firewall plate as a template (vacuum booster).
4. Drill the two lower 3/8" holes marked "B" in the diagram using the firewall plate as a template (hydraulic "Street Beast" booster).
5. Remove the bolt from the hole marked "A3".
6. Bolt the booster in place using the holes marked "B" (vacuum booster).
7. Bolt the booster in place using the holes marked "A2", "A3" and "B" (hydraulic "Street Beast" booster).

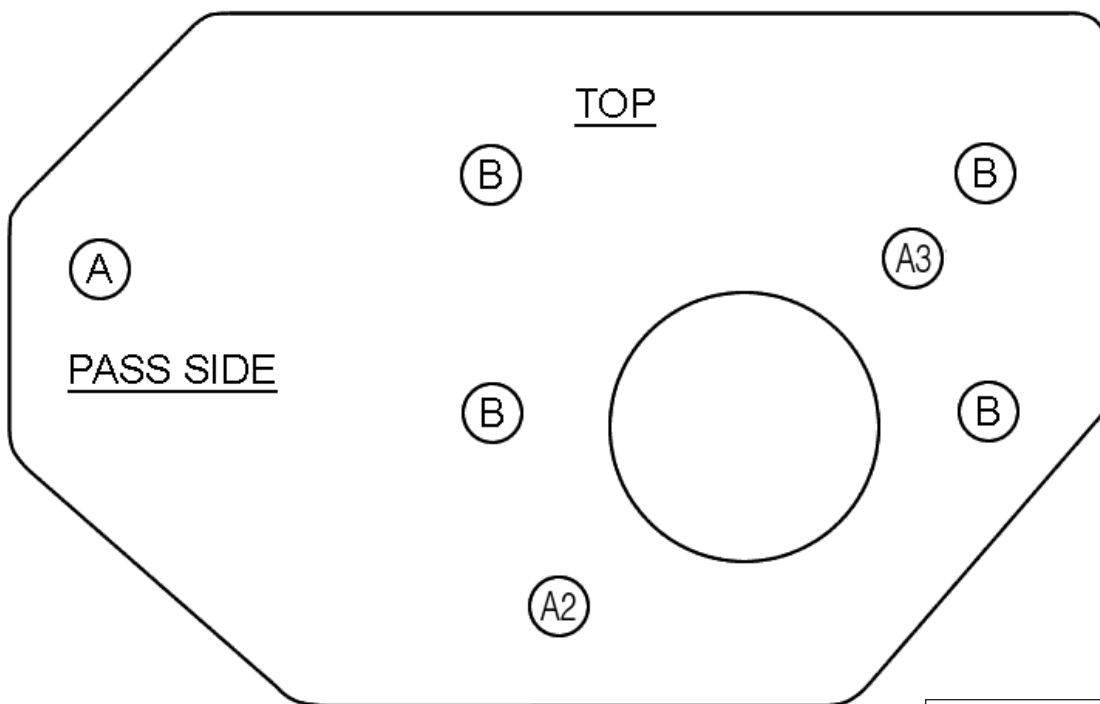

© Classic Performance Products, Inc. 2014  
All rights reserved. This document may not be reproduced  
without prior written permission of CPP.