


1928-48 Ford

POWER BRAKE PEDAL INSTRUCTIONS

**PLEASE READ THESE INSTRUCTIONS THOROUGHLY BEFORE
BEGINNING INSTALLATION**

MODEL 'A' POWER BRAKE PEDAL ASSEMBLY

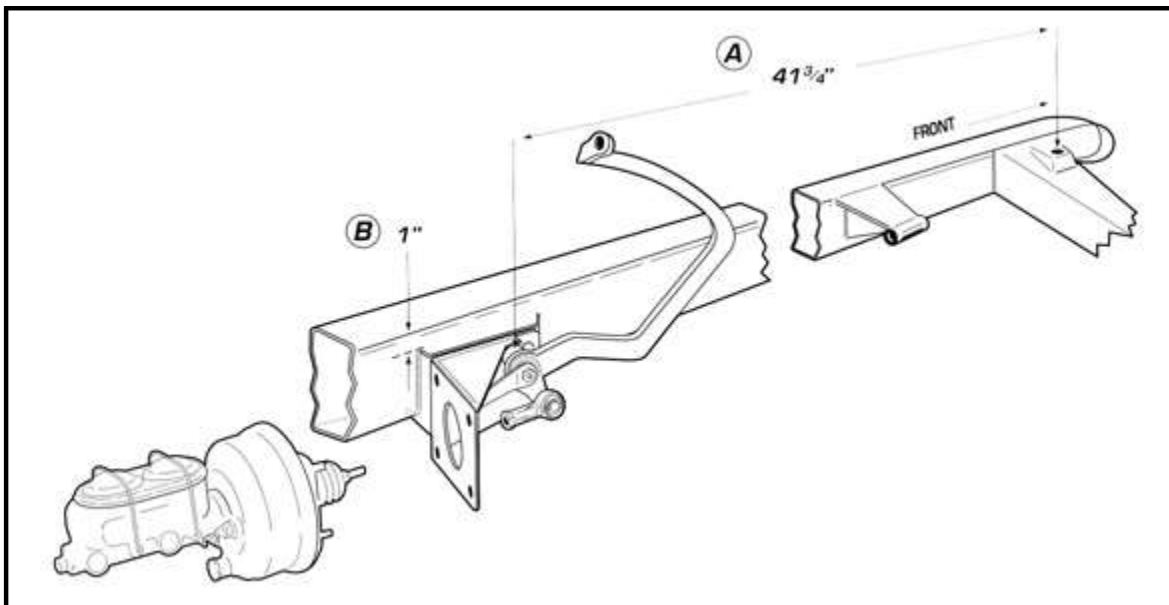

The Model 'A' power brake pedal assembly is positioned as follows:


- A. The center of the pedal pivot is positioned 41-3/4" back from the center of the radiator mounting hole.
- B. The top of the mounting bracket is located parallel to and 1" below the top of the frame rail.

All welding should be performed by a qualified welder.

PLEASE NOTE.

The above dimensions place the pedal assembly in the optimum position for use with our Model 'A' chassis and components. Minor changes may be required to find the best position on your chassis.

'32 FORD POWER BRAKE PEDAL ASSEMBLY

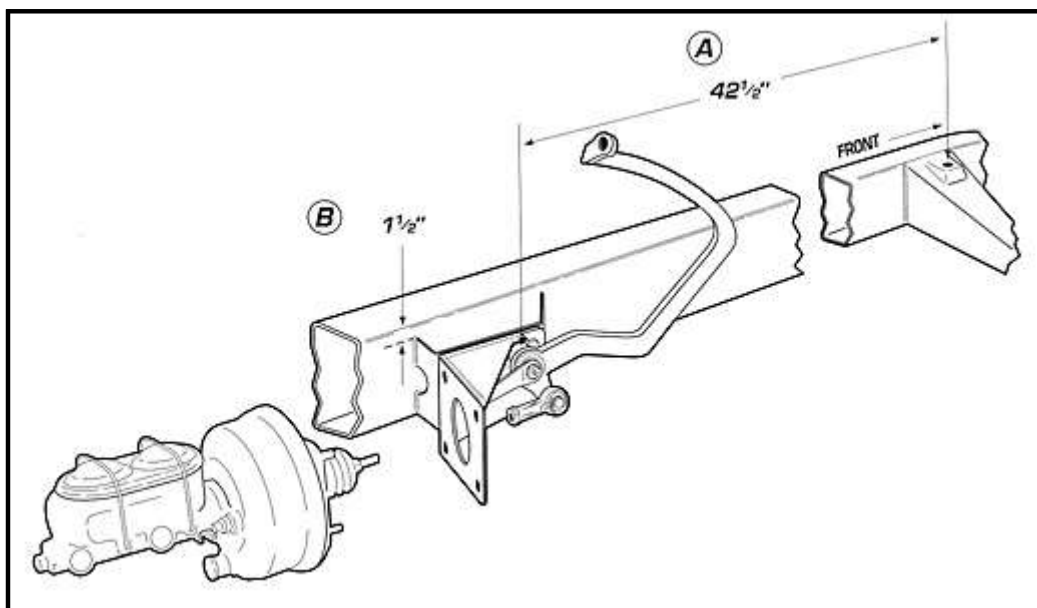

The '32 Ford power brake pedal assembly is positioned as follows:

- A. The center of the pedal pivot is positioned 42-1/2" back from the center of the radiator mounting hole.
- B. The top of the mounting bracket is located parallel to and 1-1/2" below the top of the frame rail.



All welding should be performed by a qualified welder.

PLEASE NOTE.

The above dimensions place the pedal assembly in the optimum position for use with our '32 chassis and components. Minor changes may be required to find the best position on your chassis.



'33-'34 FORD POWER BRAKE PEDAL ASSEMBLY

Mounting the '33-'34 Ford power brake pedal assembly requires some minor cutting and redrilling. Using the template provided on the back of this sheet, and the instructions below, the pedal assembly should be easily installed.

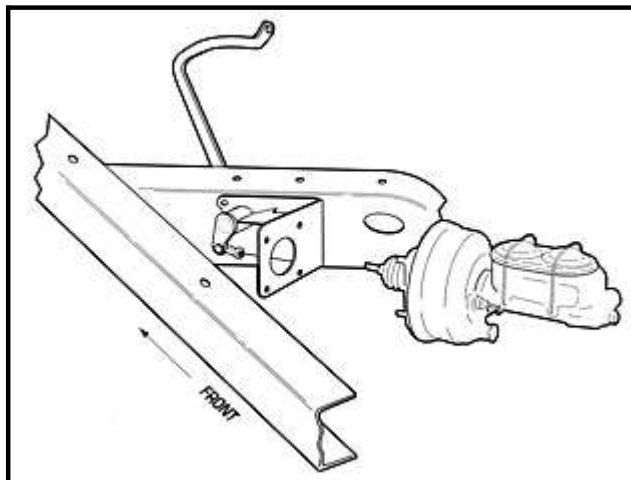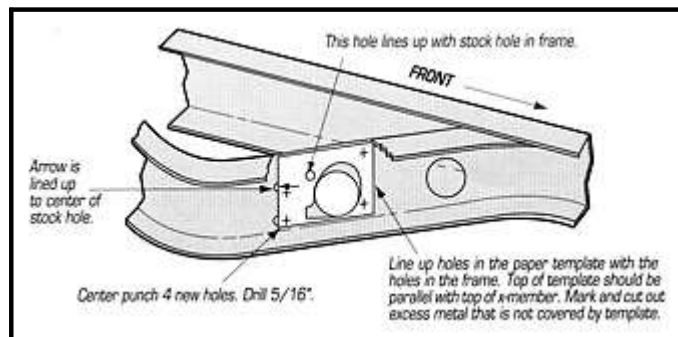


'35-'41 FORD POWER BRAKE PEDAL ASSEMBLY

Mounting the '35-'41 Ford power brake pedal assembly requires some minor cutting and redrilling. Using the template provided on the back of this sheet, and the instructions below, the pedal assembly should be easily installed.

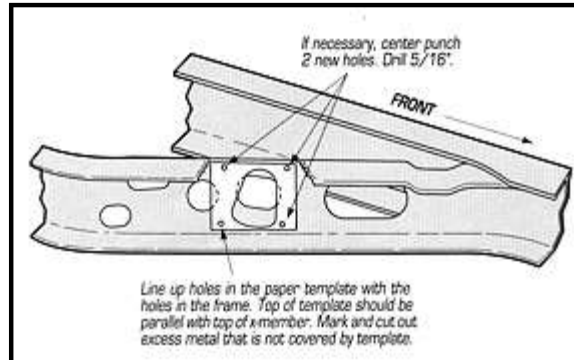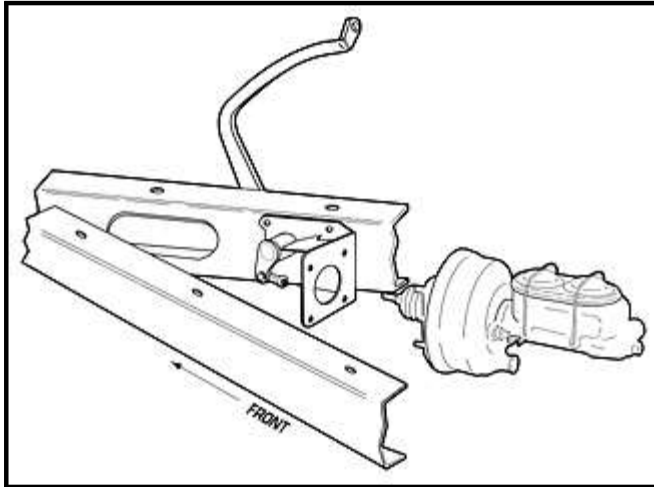

'42-'48 FORD POWER BRAKE PEDAL ASSEMBLY

Mounting the '42-'48 Ford power brake pedal assembly requires some minor cutting and redrilling. Using the template provided on the back of this sheet, and the instructions below, the pedal assembly should be easily installed.

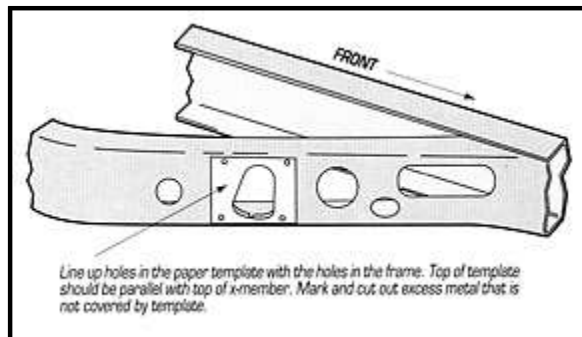

© Classic Performance Products Inc.

This "website" and all contents are property of Classic Performance Products Inc. [Disclaimer](#)