

Spindle Special Instructions II

Due to variances between different brands of ball joints, you may need to use the supplied 5/8" flat washer as a spacer when installing the ball joint.

Figure 1 shows the optimal set-up with the cotter pin hole aligned perfectly with the slotted nut. In Figure 2, the photo shows the cotter pin hole not aligned with the slotted nut. In Figure 3, a washer is used to assist with the proper alignment of the cotter pin hole with the slotted nut.


Refer to Figures 1 and 3 for correct alignment.



No washer used and cotter pin hole properly aligned with slotted nut



Washer not used and cotter pin holes mis-aligned with slotted nut.

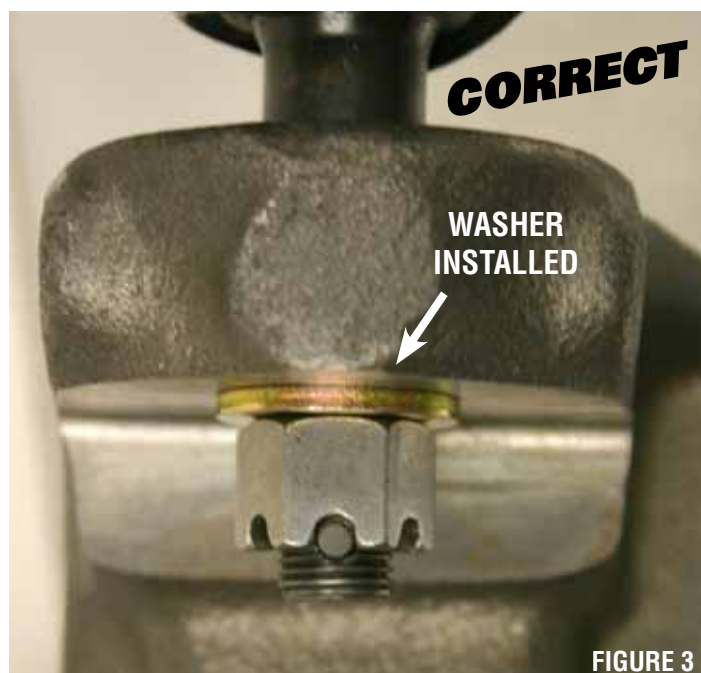

Washer used and cotter pin hole properly aligned with slotted nut